




## Replacing The Slide Plate

### Touch & Sew - Slant-O-Matic – Stylist & Fashion Mate Series

To replace the slide plate spring, loosen the screw (fig1) by turning it clockwise. Loosen enough to remove the old spring. The spring slips out by pulling it to the right. (Note: if you ordered a replacement side plate & spring - notice the notch hook on the new spring supplied with the replacement slide plate).

Insert the new spring so the notched hook slips over the screw – insert from right to left.

Center the spring evenly on the slide plate bed area & tighten the setscrew, turn counterclockwise.

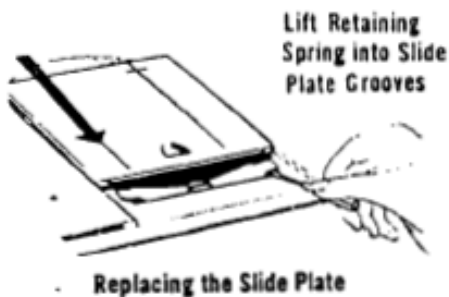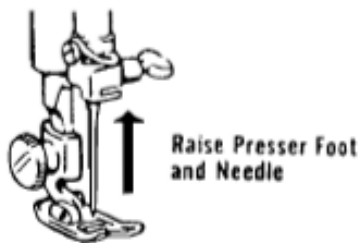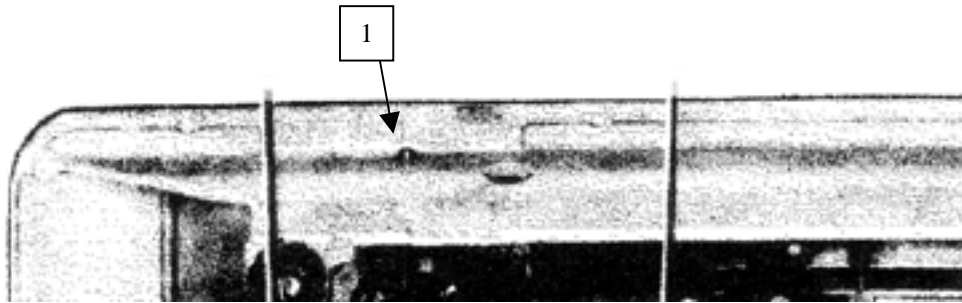

#### REPLACING SLIDE PLATE

You will not have any occasion to remove the slide plate. However, if it should accidentally become disengaged from the machine, it is easily replaced.

- Raise presser foot and needle.
- Place slide plate in slideway with the front edge close to, but not covering, the retaining spring (as shown).
- With a screwdriver, lift each end of the spring into each of the side grooves on the underside of the plate.
- Draw the plate gently toward you and fully engage the spring.
- Close slide plate.